

Toaster



Abb.	Best.-Nr.	Beschreibung	Gerätetyp	Vergl.-Nr.
1	416582	Quarzheizstab 17Ohm	TRS20.2, TRS30.2 (Mitte + unten)	4.0.075.1135
2	416583	Quarzheizstab 19Ohm	TRS30.2 (oben)	4.0.075.1137
3	416584	Quarzheizstab 19Ohm	S3, D3	4.0.074.1003

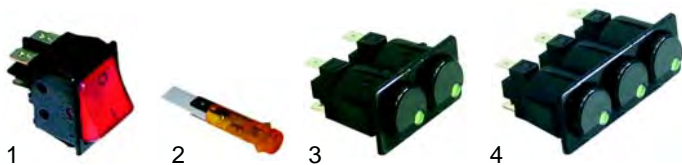 


Abb.	Best.-Nr.	Beschreibung	Gerätetyp	Vergl.-Nr.
1	301001	Schalter	S3	4.2.000.9236
2	359137	Signallampe	D3	4.0.085.0025
3	345691	Schalter doppelt	TRS20.2	4.0.000.0520
4	345692	Schalter dreifach	TRS30.2	4.0.000.0530 4.0.000.0523



Abb.	Best.-Nr.	Beschreibung	Gerätetyp	Vergl.-Nr.
1	350032	Zeitschalter	Universal	4.0.075.0002
2	110432	Knebel		4.0.075.0040

Kontaktgrill



Abb.	Best.-Nr.	Beschreibung	Gerätetyp	Vergl.-Nr.
1	416585	850W/240V (oben)		4.0.066.0084
1	416586	1150W/240V (unten)	GR4.1 GR8.2	4.0.066.0083
2	375349	Thermostat		4.0.066.0114
3	110439	Knebel		4.0.066.0112



Abb.	Best.-Nr.	Beschreibung	Gerätetyp	Vergl.-Nr.
1	359137	Signallampe		4.0.066.0025
2	700167	Feder	GR4.1 GR8.2	4.0.066.0020
3	110461	Griff		4.0.066.0046

Friteuse

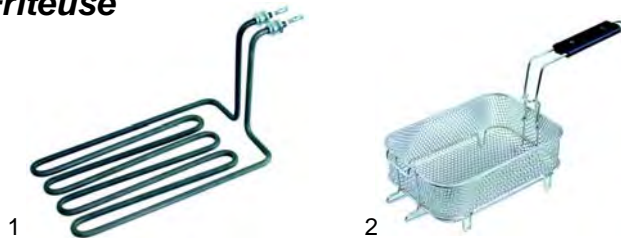 


Abb.	Bestell-Nr.	Beschreibung	Gerätetyp	Vergl.-Nr.
1	416587	2500W/230V	FF6	4.0.085.0005
2	970336	Korb	FF6+6	4.0.085.0031



Abb.	Bestell-Nr.	Beschreibung	Gerätetyp	Vergl.-Nr.
1	301086	Hauptschalter		4.0.085.0018
2	345224	Mikroschalter	FF6 FF6+6	4.0.085.0021
3	380213	Schütz		4.0.089.0003

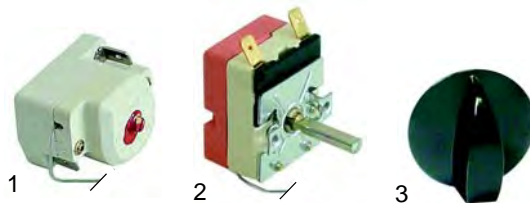 


Abb.	Bestell-Nr.	Beschreibung	Gerätetyp	Vergl.-Nr.
1	375351	Sicherheitsthermostat	FF6	4.0.085.0011
2	375356	Thermostat	FF6+6	4.0.085.0009
3	110432	Knebel		4.0.075.0040



Abb.	Bestell-Nr.	Beschreibung	Gerätetyp	Vergl.-Nr.
1	550258	Thermostat-Feder	FF6	4.0.085.0016
2	550498	Sich.-thermostat Feder	FF6+6	4.0.085.0014
3	550491	Kapillar-Feder		4.0.085.0017